


## RQX-HD-KP WIRING INSTRUCTIONS


1. To wire the DTMF Keypad to the controlling device, the HD Callbox must be opened using the T-25 Security Torx-Head driver (included with the Callbox).
2. Refer to the Enforcer Outdoor Stand-Alone Weatherproof Keypads Manual (included with the Ritron RQX-HD-KP Callbox) to connect the DTMF Keypad to the controlling device.

**IMPORTANT! – DO NOT connect the keypad wire assembly to the RQX-HD 6-conductor accessory cable assembly. The keypad wire assembly should be wired directly to the controlling device.**

**Refer to the Enforcer Outdoor Stand-Alone Weatherproof Keypads Manual that is included in this package for wiring connections and instructions.**

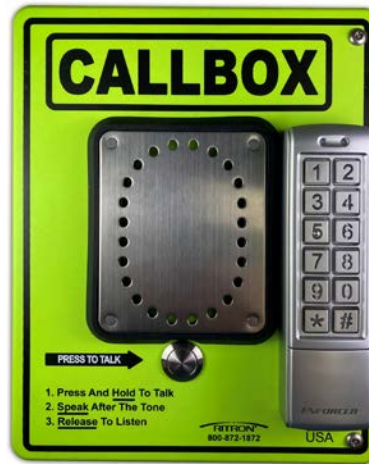

Loosen the two Torx-Head Screws to open HD Callbox

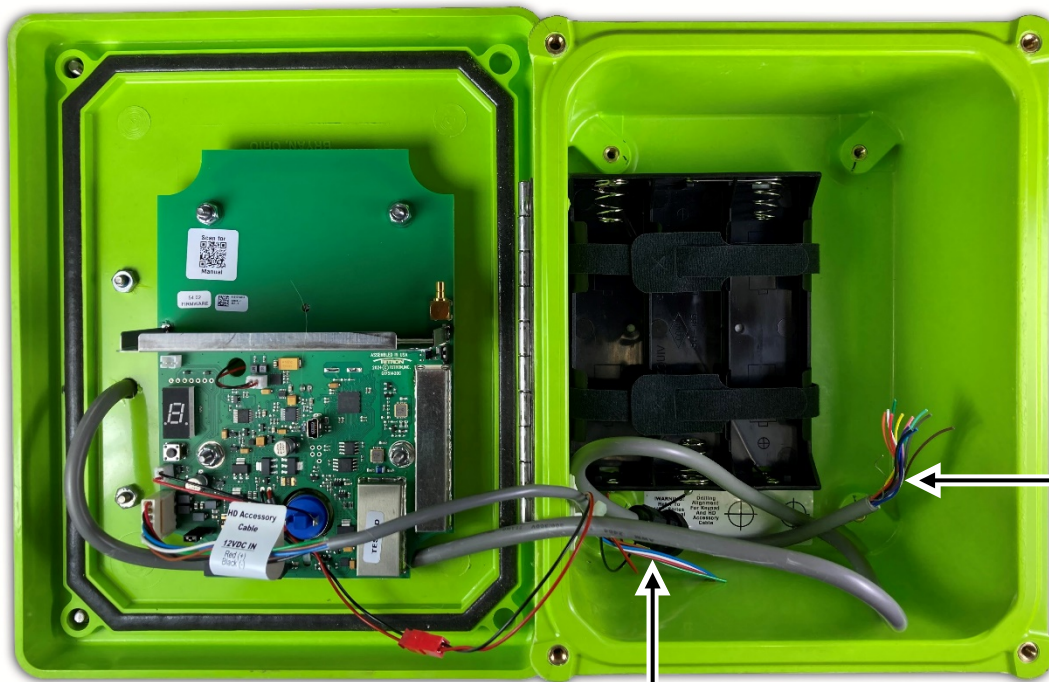

Keypad Wire Assembly

RQX-HD 6-Conductor Accessory Cable Assembly