



# American **Wire Kaddy**


AWD 1A & 10A LOADING INSTRUCTIONS

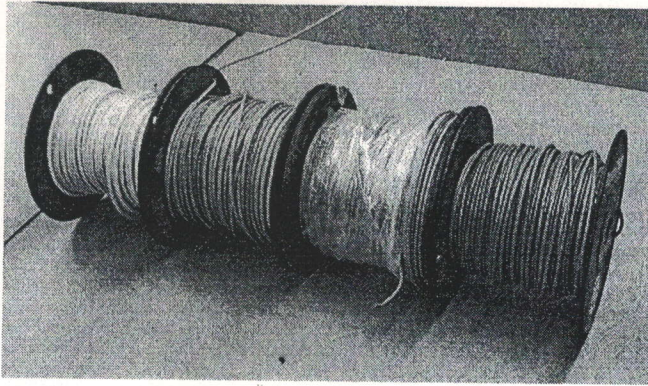


**Step 1:** Position wire spools in a straight line as shown

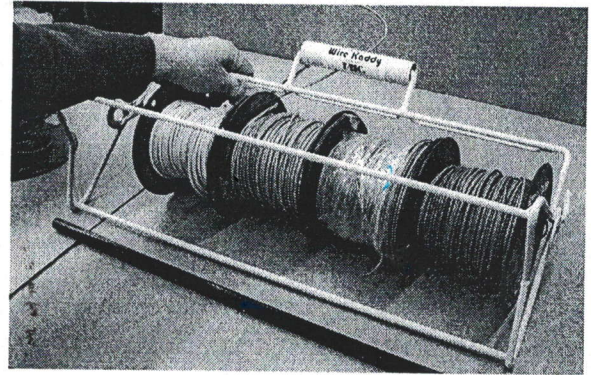


**Step 2:** Take out safety cotter and remove center shaft. Rotate to a side position over wire spools.

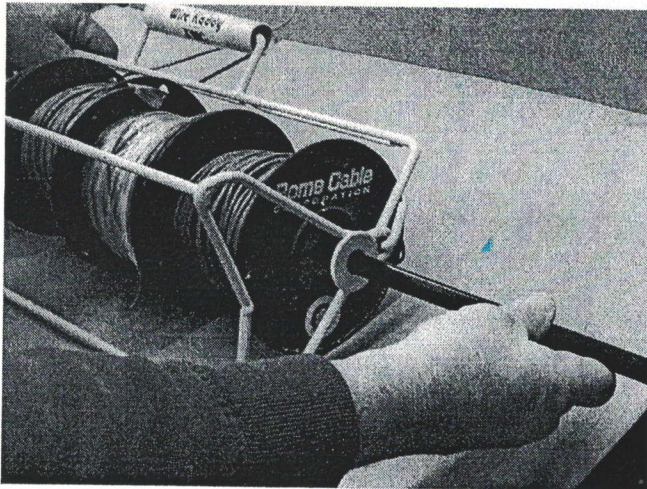

**Step 3:** Insert shaft into side bushing and thru wire spools holes. Position frame so that the shaft will slide thru bushing on the opposite side.

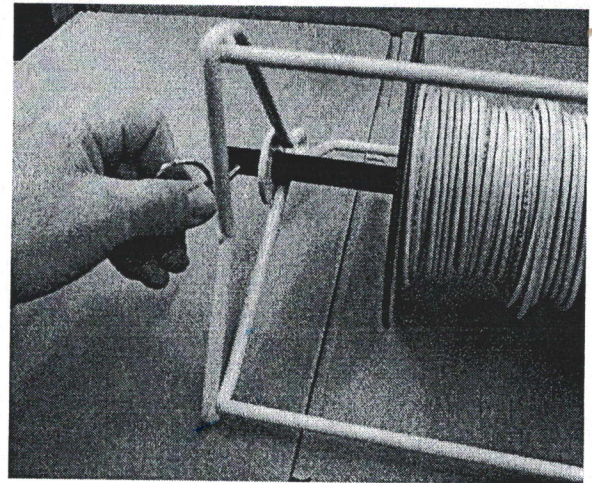

**Step 4:** Turn right side up and insert safety cotter.

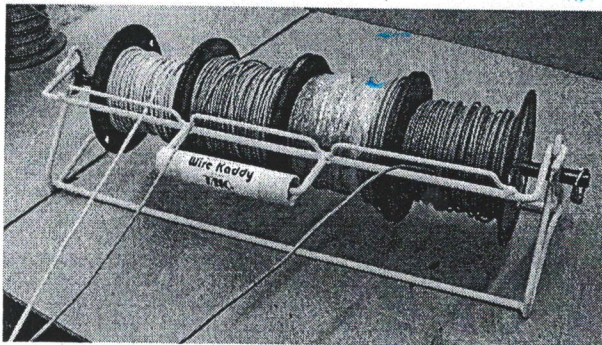

**Step 5:** String wire from each spool thru handle slots and tie knot to keep spool from unwinding during transport.

# T/MC:

*we make stuff*

TOMLINSON MANUFACTURING COMPANY INC.

MADE IN THE USA SINCE 1977