Transitional Shades

manh truc ®
Woven Wood Shades

genesis ®
Roller/Roman Shades

interior masterpieces ®
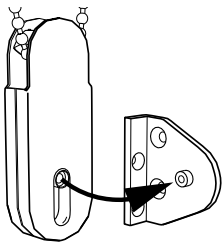Fabric Shades

parasol ®
Cellular Shades

Bead Chain/Cord Tension Lock
Installation Instructions
Installers MUST INSTALL Cord Tension Lock Properly
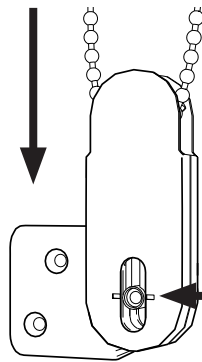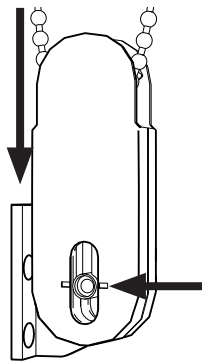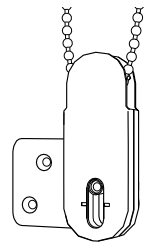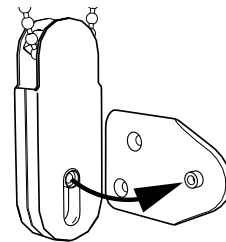
Mark Mounting Position
Lower shade to make sure the Cord Tension Lock is not placed in the path of the bottom rail or fabric

Outside Mount

Inside Mount

Insert the nub of the Bracket into the Tensioner Center Hole
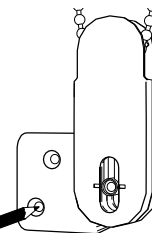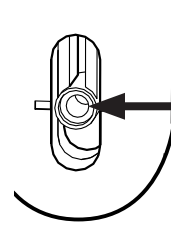
Pull the Chain taut with the Bracket on the mounting surface

Slide the Bracket and the Tensioner Center down to the Guide Lines on the Cord Tensioner

The Center Hole of the Tensioner must be aligned with the guide lines

While holding the lock firmly in place, check that the loop can move freely through the Tensioner
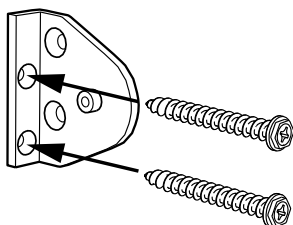
Mark the Bracket location on the Mounting Surface

If the Bracket is not Aligned properly:

If the Tensioner locks onto the loop, it is too loose and the bracket and lock should be **moved down**

If the loop does not run freely through the lock, it is too tight and the bracket and lock should be **moved up**
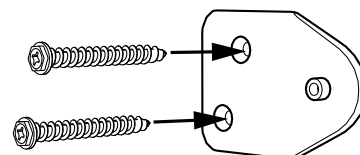
Attach the Bracket to Mounting Surface
Outside Mount

Inside Mount

Move Tensioner out of the way and attach to Mounting Surface with the Two Longer Screws provided

Attach the Cord Tension Lock to Bracket

Pull the Tensioner's spring loaded Slider down to the bracket

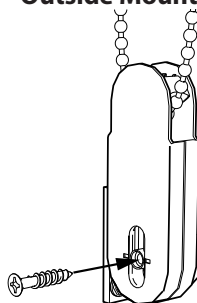a small tool may be helpful in moving the slider

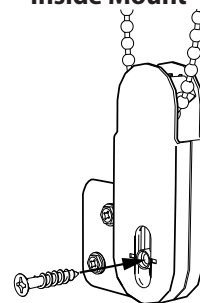Make sure the Tensioner's Center Hole is seated on the nub of the bracket

Use the small screw to attach Tensioner
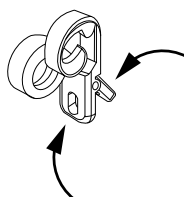
Do not Overtighten

Outside Mount

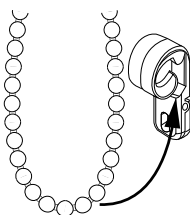**Inside Mount**

P-Clip Safety Tensioner
Installation Instructions

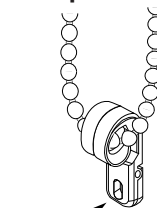| Step 1	Install the Chain or Cord

Step 1

Squeeze the P clip together to close it
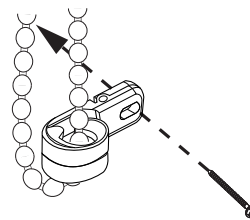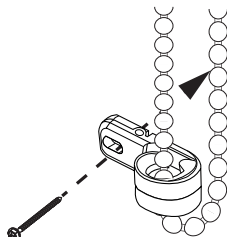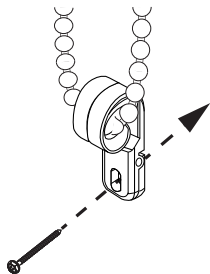
Step 2

Slide Chain or Cord into the P-Clip

Step 3

With the shade securely installed, pull the chain taut and mark the location on the mounting surface

Step 2	Install the Tensioner

The P-Clip Safety Tensioner can be installed in a few different orientations. Choose one that best suits your needs and make sure that the cord or chain is taut and moves freely through the Tensioner

Then secure to the mounting surface using the screw provided

Make sure the P-Clip Safety Tensioner is not placed in the path of the bottom rail or fabric

It is imperative that the Tension Lock for bead chain or cord loops is properly secured to the wall or window frame to reduce a child's access to the chain or cord loops.
Young children and pets can wrap chains around their necks and strangle themselves.

LAFAYETTE
interior fashions™

18-2289-00   MAR. 2022