fidelis®

Installation Instructions

MOUNTING INSIDE OR OUTSIDE WINDOW FRAME

Your package contains installation brackets and screws for mounting the blind inside (fig. 1) or outside the window frame (fig. 2). Hold the blind against the window opening to determine if it fits inside or outside the opening. If the window frame is not even or level, (fig. 3) be sure the *headrail* is level. This can be done by lowering the headrail to clear any obstructions, but the headrail must be level so the blind will operate properly.








Fig. 1


For inside the window installations, mount the brackets in the corner of the jambs. .. make sure the headrail is level. For outside installations, hold the blind level at the desired height and mark the window frame (or wall) lightly on each end at the bottom of the headrail. Now center the blind (using the marks as a guide) and also mark the exact position of the ends of the headrail. The installation brackets should be located 1/4" beyond the end of the headrail marks.

SECURING THE BRACKETS


Two hinged-cover installation brackets are provided for each blind. . . a left and a right hand (fig. 4). The safety locking covers will secure the blind firmly in place.





Open the bracket cover by pressing the bottom, and pull the hinged safety locking cover open (fig. 5). Each bracket is designed to be mounted with two screws. Typical installations for inside mounts are to the jamb (fig. 6) or the soffit (fig. 7) of the window frame. The screws should be diagonally located. Typical installations for outside mounts are to the window frame, or wall (fig. 8) or to the ceiling (fig. 8) through the top parallel screw holes.

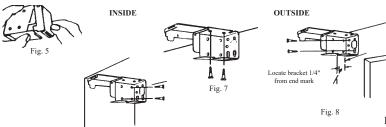

For Outside Mount 2 1/2" blinds Spacer Blocks are REQUIRED








If a center support is needed, place the included Spacer Block behind it and line it up with the screw holes before installing



OPTIONAL EXTENSION BRACKETS

If 2" or 4" extension brackets were ordered (so the blind would clear an obstruction such as a window crank) follow outside installation instructions for bracket locations.







Use appropriate fasteners to bolt the mounting brackets to the extension. Note: Be certain the mounting brackets are aligned with one another and with any intermediate supports (fig. 12). The intermediate support would have to be mounted to the bottom of the extension (fig. 9).

SUPPORTING WIDE BLINDS

If your blinds are over 48 inches wide an intermediate support bracket must be installed on the window frame (fig. 10) or to the soffit, or ceiling (fig. 11).




It should be close to the center, but it must not interfere with the headrail components. For blinds over 72 inches wide, two intermediate support brackets must be installed and spaced not more than 48 inches apart. Keep in mind the intermediate bracket must be aligned with the end mounting brackets (fig. 12).




INSERTING THE HEADRAIL

Having installed the left and right brackets (and required intermediate support brackets) you are now ready to install the blind. Open the bracket covers (fig. 5). Next, check the headrail to be sure all cords and tape ladders operate freely. If nothing is tangled, and if intermediate support(s) are used, slip the headrail into the support bracket and push it into place (fig. 13).

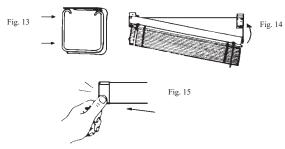


If no intermediate bracket is used, slip the headrail into the brackets (fig. 14) and snap the safety locking cover shut (fig. 15). If the blind is loose in the brackets, open the brackets and expand the end lock tab(s) on the headrail using a screwdriver (fig. 16). If too tight, compress the tab by pushing it in one or both sides.




TILTER

Your blind is supplied with a cord tilter. You will find cord controls on each side of the headrail, one set for tilting the slats (with tassels) and one set for raising and lowering the slats (usually on the right). To tilt the slats to fully closed in one direction, simply pull one cord down. By pulling the second cord, it will tilt the slats in the opposite direction (fig. 17).



If you ordered a blind with a wand tilt, you will find a metal shaft with a small hole protruding from the headrail. The wand provided has a metal hook with a plastic sleeve over the hook. Remove the plastic sleeve by pulling upward (fig. 18). The hook, still attached to the wand will be in an open position. Next, slide the plastic sleeve you removed over the metal shaft protruding from the headrail (fig. 19). Holding the sleeve up above the tilter shaft hole, insert the wand hook through the shaft hole until it "rests" in the bend of the hook. Then slide the plastic back down over the hook until it is back in the closed position (fig. 20). You will then be able to tilt the louvers of the blind by turning the wand. Approximately 4 revolutions of the wand are required to tilt the slats from fully closed in one direction to fully closed in the opposite direction.




VALANCE

Inside Mount: To install the valance, snap the clip onto the headrail. Then snap the valance into the valance clip.


Outside Mount: To install the valance, snap the clip onto the valance. Then snap the clips onto the headrail.


Note: Do not put any valance clip or obstruction over the motor/transmission.

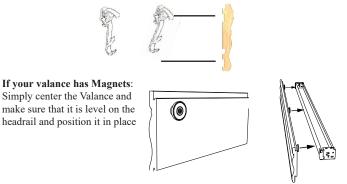

VALANCE RETURNS


On outside mount valances, corner brackets are used to connect the valance to the valance return. Slide the bracket into the groove on the back side of the valance and then slide other side of the bracket into the valance return.






Tabs will fit into the notches

Slide returns and valance until a flush corner is made




ATTACHING HOLD-DOWN BRACKETS (OPTIONAL)

To mount the hold-down brackets, first fully lower the blind. Align the hold-down brackets with the pins in the bottom rail. Align the second slot with the pin and insert the pin.



RAISING AND LOWERING BLINDS

To raise or lower the blind, first tilt the venetians to the open position. An automatic locking device takes effect when the cords hang vertically down. To raise or lower the blind pull the cords towards the middle and down slightly to release the lock (fig. 22). When at the desired height, return the cord at the vertical position to re-engage the locking device (fig. 23). When raising or lowering the blind, the slats should be in the horizontal (open) position.



LIGHT-BAN SLAT SYSTEM

The Light-Ban slat system allows tighter closure and offers superior light control. There are no rout holes with the Light-Ban design so light can't peek through the holes and into the room. Note: This feature is optional on Fidelis wood blinds.


CLEANING YOUR BLIND

Washing the blind is NOT recommended. Since the surface of the slats is quite smooth, dust may be easily brushed off at regular intervals using a clean, soft dust cloth or a vacuum cleaner brush attachment. The EZE-Clean feature allows each slat to be tilted forward or rotated for easy dusting while the blind is still in the window. With the EZE-Clean feature, each slat can also be removed and replaced individually for thorough cleaning and polishing of your wood blind.

REMOVING SLATS WITH EZE-CLEAN OPTION

For a thorough cleaning, the EZE-Clean feature allows you to remove the slats of your wood blind. Our Eze-Clean option allows you to tilt the slats in the open position (fig. 24) and slide each slat from the ladder. Please be sure you have sufficient wall space for clearance of the slat to insure that you do not damage the slat (fig. 25). For inside mounts, gently pull the wood blind forward to insure clearance from the window casing.





REPLACING SLATS WITH EZE-CLEAN OPTION

With blind in open position, carefully slide the slat back onto the surface ladder. Make sure that the front and back notches of the slat are lined up with the vertical cords (fig. 26).

